



USB-40-S

photos




40 FOOT RETRACTABLE (FEMALE) USB CABLE

description

PREMIUM USB (2.0) CABLE WITH PREMIUM USB CONNECTORS. THE RETRACTABLE END IS OUTFITTED WITH A FEMALE USB (2.0) OUTLET/REPEATER FOR A DEVICE. IDEAL FOR CONNECTING TO A DEVICE SUCH AS A WEBCAM. THE STATIC END IS A 3 FOOT MALE USB (2.0) CONNCECTOR FOR A HOST. THE POWDER COATED BLACK STEEL, MILITARY GRADE HOUSING COMES STANDARD WITH A FLAT MOUNTING STRAP THAT CAN BE FASTENED TO A DESKTOP, CABINET, OR RACK MOUNT. CEILING MOUNTS AND CONSTANT TENSION AVAILABLE UPON REQUEST. ELIMINATES CORD WINDING, CORD TANGLES AND STAGE/STUDIO CLUTTER WITH INSTANT CABLE RETRACTION. THE USB-40-S PROVIDES PROTECTION AND ORGANIZATION FOR YOUR USB CABLE. CONSTANT TENSION AVAILABLE

details

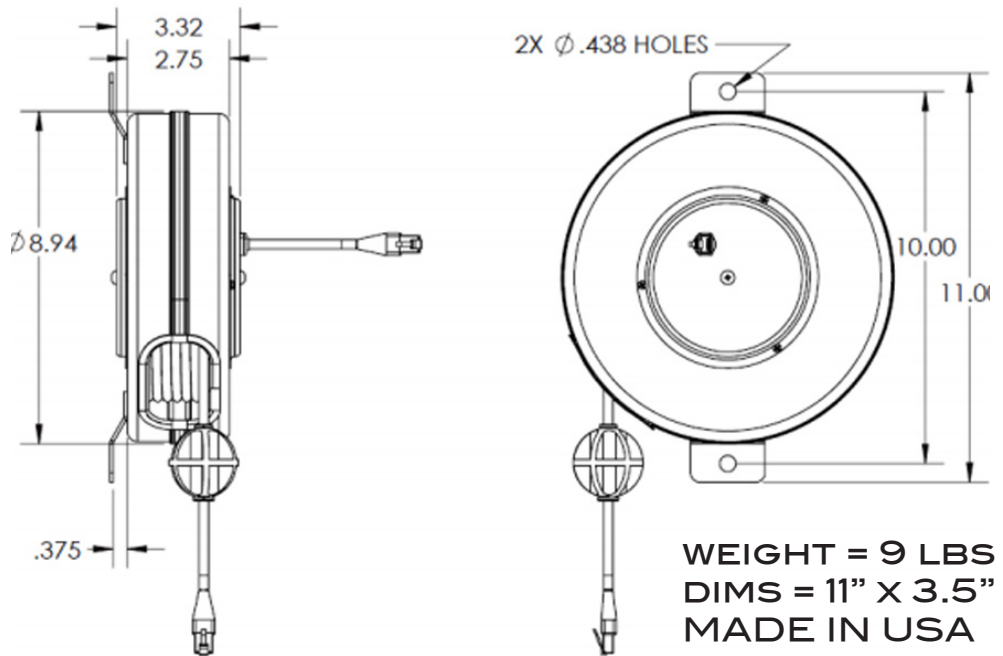

OPTIONAL CEILING MOUNT

WEIGHT = 9 LBS
DIMS = 11" X 3.5"
MADE IN USA

WARNING!!

Read all instructions. Keep out of reach of children. The Stage Ninja® Retractable Cord is not a toy! This product can cause injury including, burns, cuts, eye injuries, or amputation if cord is used improperly. Recoil can cause injuries, especially when recoil is unexpected. When unplugging from instrument, hold cable end when retracting to maintain control of recoil. Do not wrap Cord around finger, neck, arm, leg, or other appendage or body part. The Retractable Cord is for use by responsible adults only. Do not allow anyone to touch or come in contact with the Retractable Cord while in use. Unplug Cord from musical instrument and amplifier when not using. Stop using the Retractable Cord if it becomes frayed, damaged, shows other signs of significant wear and tear, or does not function properly. Do not attempt to repair the Cord. Wear long pants to reduce the risk of leg burns and cuts from the Retractable Cord. Do not place hands, feet, head, or other appendage or body part near housing unit while Cord is extended. Please heed these warnings and use Retractable Cord with caution.