



# MIDI-20-S

15 FOOT RETRACTABLE MIDI CABLE

## photos




INCLUDED RUGGED CANVAS HANDLE

## description

INSTANTLY WIND UP 15 FEET OF MIDI CABLE WITH 1 PULL! THE STAGE NINJA MIDI-20-S IS EQUIPPED WITH PREMIUM MIDI CABLE. THE RETRACTABLE END IS 15 FEET AND HAS PREMIUM MIDI CONNECTORS. THE STATIC END IS 6 FEET AND FEATURES PREMIUM MIDI CONNECTORS. THE DURABLE, SEAMLESS ABS PLASTIC HOUSING IS AVAILABLE WITH INTERCHANGEABLE WALL MOUNTING STRAP AND RUGGED, CANVAS HANDLE OPTIONS. ELIMINATES CORD WINDING, CORD TANGLES AND STAGE/STUDIO CLUTTER WITH INSTANT CABLE RETRACTION. THIS IS AN EXCELLENT TOOL FOR MAXIMUM EFFICIENCY. CONSTANT TENSION AVAILABLE

## details

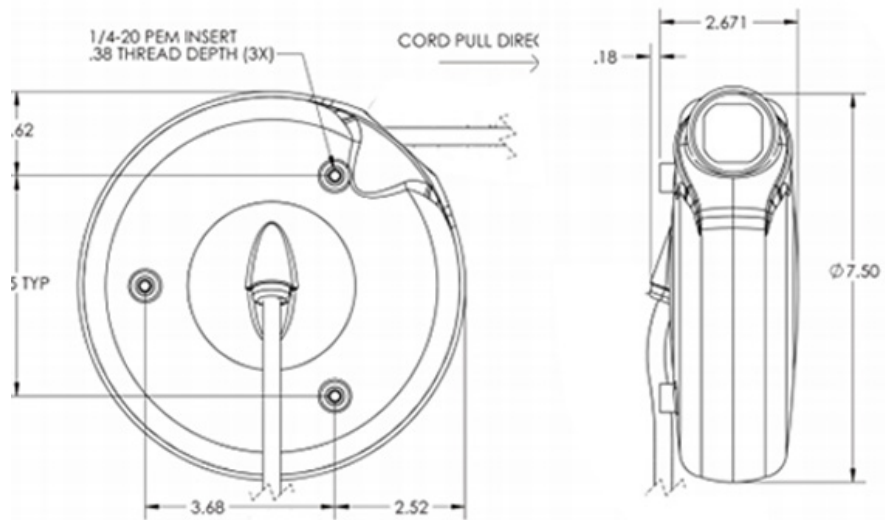

WEIGHT = 6 LBS  
DIMS = 11" X 3.5"  
MADE IN USA

## WARNING!!

Read all instructions. Keep out of reach of children. The Stage Ninja® Retractable Cord is not a toy! This product can cause injury including, burns, cuts, eye injuries, or amputation if cord is used improperly. Recoil can cause injuries, especially when recoil is unexpected. When unplugging from instrument, hold cable end when retracting to maintain control of recoil. Do not wrap Cord around finger, neck, arm, leg, or other appendage or body part. The Retractable Cord is for use by responsible adults only. Do not allow anyone to touch or come in contact with the Retractable Cord while in use. Unplug Cord from musical instrument and amplifier when not using. Stop using the Retractable Cord if it becomes frayed, damaged, shows other signs of significant wear and tear, or does not function properly. Do not attempt to repair the Cord. Wear long pants to reduce the risk of leg burns and cuts from the Retractable Cord. Do not place hands, feet, head, or other appendage or body part near housing unit while Cord is extended. Please heed these warnings and use Retractable Cord with caution.