

USB-25-5

photos





description

STAGE NINJA'S USB-25-S INSTANTLY RETRACTS 25 FEET OF PREMIUM USB (2.0) CABLE. THE RETRACTABLE END IS OUTFITTED WITH A FEMALE USB (2.0) OUTLET/REPEATER. THE STATIC END IS A 3 FOOT MALE CONNECTOR. IDEAL FOR RUNNING A CABLE TO A DEVICE SUCH AS A WEBCAM OR SIMILAR DEVICE. THE DURABLE, SEAMLESS ABS PLASTIC HOUSING IS AVAILABLE WITH INTERCHANGEABLE WALL MOUNTING STRAP AND RUGGED, CANVAS HANDLE OPTIONS. ELIMINATES CORD WINDING, CORD TANGLES AND STAGE/STUDIO CLUTTER WITH INSTANT CABLE RETRACTION. THIS IS AN EXCELLENT TOOL FOR MAXIMUM EFFICIENCY.


CONSTANT TENSION AVAILABLE







INCLUDED RUGGED CANVAS HANDLE

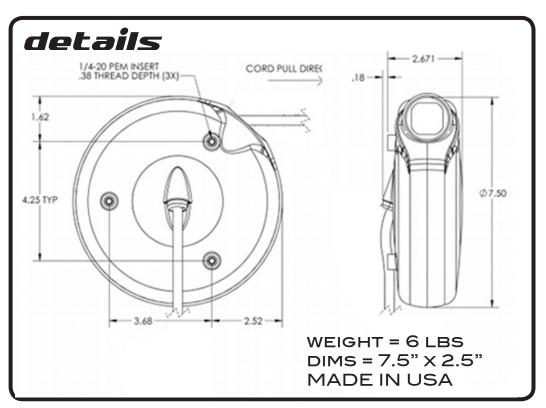

WARNING!!

Read all instructions. Keep out of reach of children. The Stage Ninja® Retractable Cord is not a toy! This product can cause injury including, burns, cuts, eye injuries, or amputation if cord is used improperly. Recoil can cause injuries, especially when recoil is unexpected. When unplugging from instrument, hold cable end when retracting to maintain control of recoil. Do not twarp Cord around finger, neck, arm, leg, or other appendage or body part. The Retractable Cord is for use by responsible adults only. Do not allow anyone to touch or come in contact with the Retractable Cord while in use. Unplug Cord from musical instrument and amplifier when not using. Stop using the Retractable Cord if the bornes frayed, damaged, shows other signs of significant wear and tear, or does not function properly. Do not attempt to repair the Cord. Wear long pants to reduce the risk of leg burns and cuts from the Retractable Cord. Do not place hands, feet, head, or other appendage or body part near housing unit while Cord is extended. Please heed these warnings and use Retractable Cord with caution.