

10' (3.05 m) Retractable Medical Power Cable Reel IEC C13 Female Tap with Antimicrobial Housing

Efficient cable management solution for professional environments.

The Stage Ninja® MED-10-IEC includes 10 feet (3.05 m) of 14/3 SJT retractable cable with a hospital-grade antimicrobial NEMA 5-15P plug and an 18 in (0.45 m) 16/3 SJT static lead with an IEC 320 C13 female tap. The reel's high-impact plastic housing features a permanent antimicrobial additive and meets UL 60601-1 standards. A pull-to-lock, pull-to-release mechanism ensures smooth cable retraction, and a 9 in (22.86 cm) flat mounting strap is included for horizontal surfaces.

Key Features

Durable High-impact plastic housing molded with a permanent antimicrobial additive

Retractable Pull-to-lock, pull-to-release mechanism for smooth cable retraction

Reliable 14/3 SJT retractable cable with NEMA 5-15P hospital-grade antimicrobial plug; 16/3 SJT static lead with IEC 320 C13 female tap


Flexible 10' retractable end; 18" static lead

Mounting Includes 9" flat mounting strap; optional vertical mounting brackets (VMB-7-S and VMB-7-SVL)

Custom options available to meet specific requirements. Call 317-829-1507 to learn more. Made in the USA.





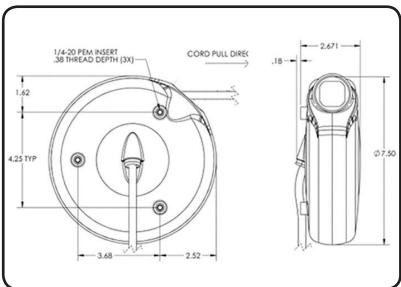

Reel Material Retraction Length Static Length Connectors

Cable Type **Electrical Rating** Size Weight Mounting

Lock & Release Warranty

High-impact plastic with permanent antimicrobial 10 ft (3.05 m)

18 in (0.45 m)

NEMA 5-15P hospital-grade antimicrobial plug (retractable end); IEC 320 C13 female tap (static end) 14/3 SJT (retractable); 16/3 SJT (static)

125 V, 10 A, 1250 W

Diameter 7.5" (19.05 cm); Thickness: 2.85" (7.24 cm)

Approximately 3 lbs (1.36 kg)

Includes 9-in. flat mounting strap with 0.27" (0.69 cm diameter holes spaced 7.77" (19.74 cm) apart; optional vertical brackets (VMB-7-S and VMB-7-SVL

Pull-to-lock, pull-to-release mechanism

1-year limited warranty



Visit Stage Ninja



E-Mail Support





Terms & Conditions

WARNING Read all instructions before use. This product can cause injury, including but not limited to burns, cuts, eye injuries, or amputation if the cord is misused or damaged. Recoil may cause injuries, especially when reconnecting. When unplugging, hold the cable end to maintain control. Avoid wrapping the cord around any appendage or body part. Wear long pants and protective gear to minimize the risk of burns or cuts from the retractable cord. The retractable cord is intended for use by responsible adults only. Keep out of reach of children. Do not allow anyone to touch or come into contact with the reel while in use. Stop using the retractable cable if it shows any signs of wear, damage, or does not function properly. Do not place hands, feet, head, or any ther body part near the housing while the cord is extended. Please heed these warnings and exercise caution when using the retractable cable.